

## Technical Tip

### AdvanTech® Panels and Spray-In Foam Insulation


There are two types of spray-in insulation, Closed Cell Foam (Rigid) and Open Cell (Semi-Flexible) Foam Insulations. Both these products come in a variety of derivatives such as soy, polyurethane, polyisocyanurate, icynene, etc.

Open cell foam insulation is not completely closed and allows for air to fill the open spaces in the insulation.



Open Cell Insulation

Closed cell foam insulation packs and fills the cells closed with a gas and allows the foam to rise and expand.

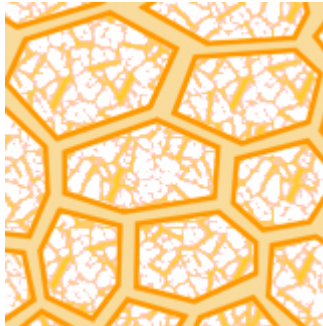

Closed Cell Insulation

These types of products are suitable for use with AdvanTech flooring and sheathing. Prior to application, ensure the panels are dry and free of debris as not to deter the adhesion of the foam. Follow the installation recommendations of the insulating foam manufacturer.

AdvanTech is a registered trademark of Huber Engineered Woods LLC.